


INSTALLATION INSTRUCTIONS - BRAVO C STOCK

WARNING: Before beginning the installation process prioritize safety by ensuring the firearm is unloaded, the chamber is empty, the safety is engaged, and the firearm REMAINS pointed in a safe direction.



BUTTPAD RELEASE TABS

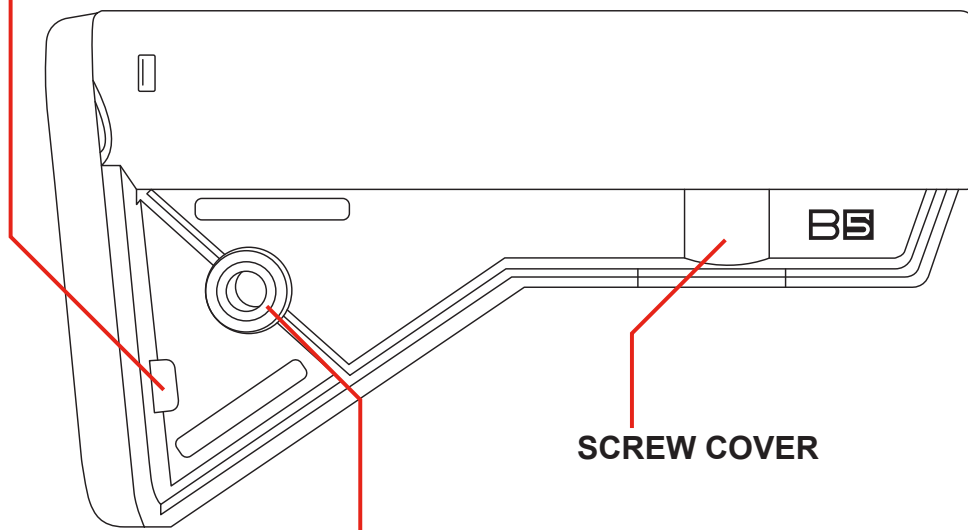

QD ATTACHMENT

SCREW COVER

Follow these step-by-step instructions for the removal and re-installation of Components, adhering to safety protocols throughout.

If necessary, carefully remove the existing stock in accordance with the manufacturer's recommendations, taking care to avoid any damage to the receiver.

Materials Provided - Bravo C Stock, Set Screw

Tools Required - Flat head screwdriver

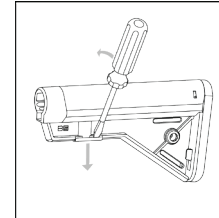


FIG 1

Align the stock with the buffer tube in the desired placement.

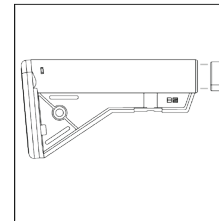


FIG 2

Using the flathead, carefully remove the screw cover by applying firm downward pressure.

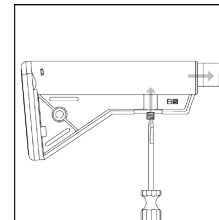


FIG 3

On the underside of the grip, install the provided set screw. Tighten until secure, exercising caution not to overtighten.

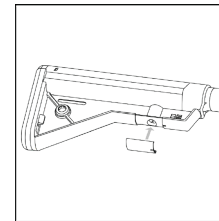


FIG 4

Reinstall screw cover using firm pressure.

Buttpad Removal: Remove the buttpad by squeezing the tabs firmly and applying pressure. To reinstall align upper groove into appropriate place on back of stock and push up while pressing the locking tabs back into place.