


INSTALLATION INSTRUCTIONS - CAR15 STOCK

WARNING: Before beginning the installation process prioritize safety by ensuring the firearm is unloaded, the chamber is empty, the safety is engaged, and the firearm **REMAINS** pointed in a safe direction.

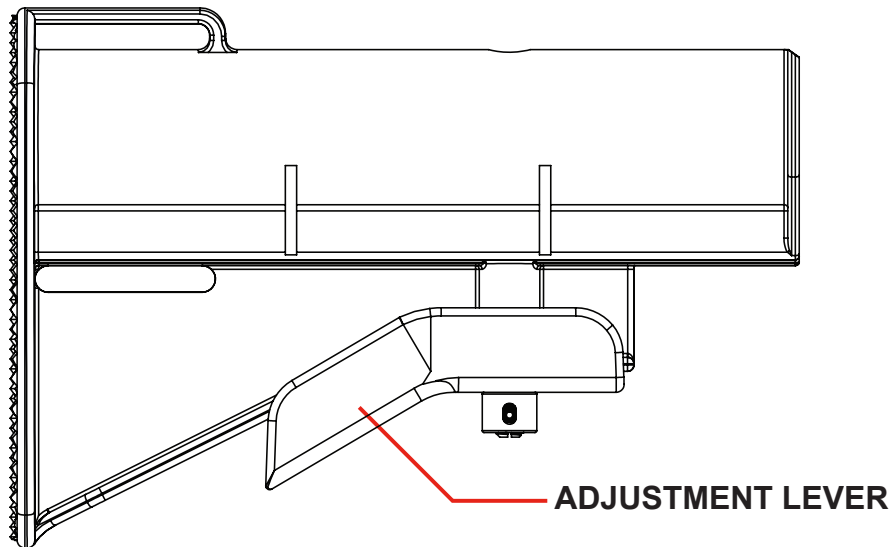

Follow these step-by-step instructions for the removal and re-installation of Components, adhering to safety protocols throughout.

If necessary, carefully remove the existing stock in accordance with the manufacturer's recommendations, taking care to avoid any damage to the receiver.

Materials Provided - CAR15 Stock

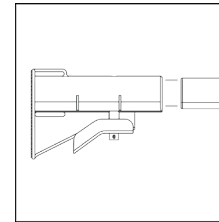


FIG 1

To install, align stock with the buffer tube.

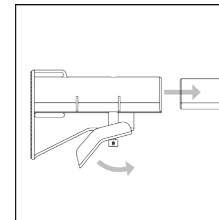


FIG 2

Pull the adjustment lever down firmly until the stock can smoothly slide onto the buffer tube. Take care not to slide the stock on too far.

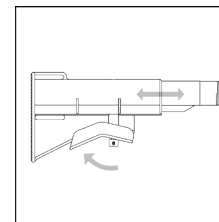


FIG 3

The adjustment lever should now allow the stock to move freely without coming off the firearm and installation is complete.