


INSTALLATION INSTRUCTIONS - SOPMOD STOCK

WARNING: Before beginning the installation process prioritize safety by ensuring the firearm is unloaded, the chamber is empty, the safety is engaged, and the firearm REMAINS pointed in a safe direction.



BUTTPAD RELEASE TABS

WATER RESISTANT STORAGE

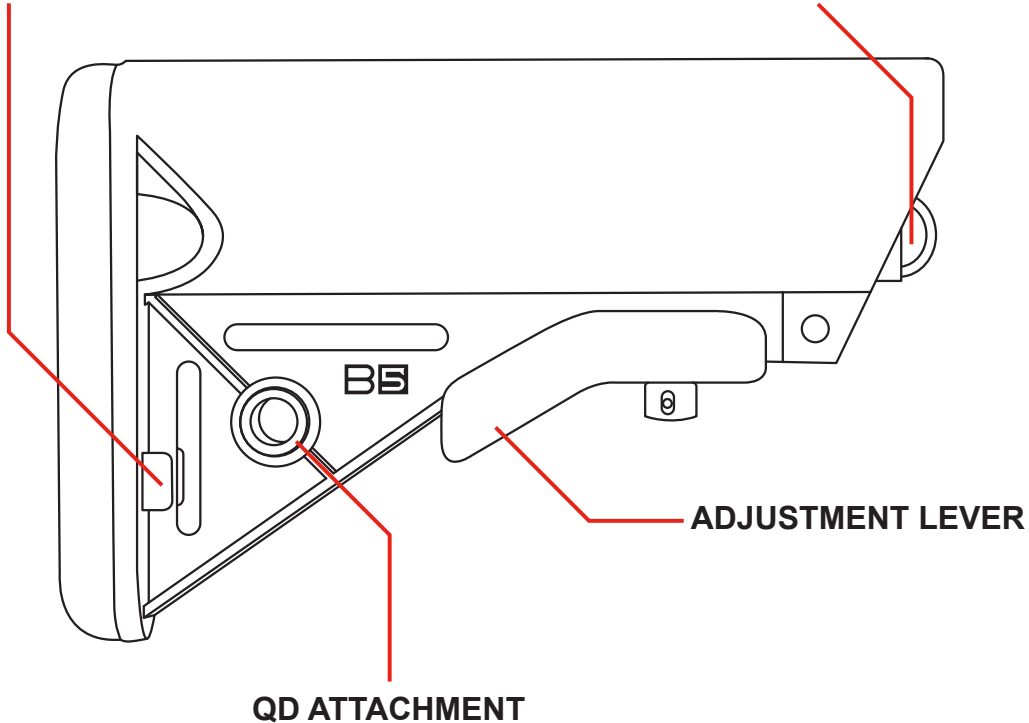

Follow these step-by-step instructions for the removal and re-installation of Components, adhering to safety protocols throughout.

If necessary, carefully remove the existing stock in accordance with the manufacturer's recommendations, taking care to avoid any damage to the receiver.

Materials Provided - SOPMOD Stock

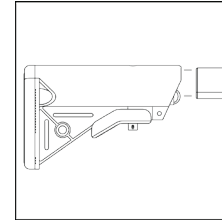


FIG 1

To install, align stock with the buffer tube.

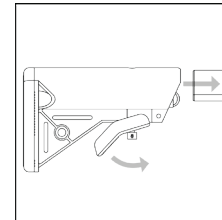


FIG 2

Pull the adjustment lever down firmly until the stock can smoothly slide onto the buffer tube. Take care not to slide the stock on too far.

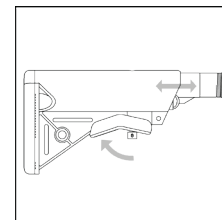


FIG 3

The adjustment lever should now allow the stock to move freely without coming off the firearm and installation is complete.

Buttpad Removal: Remove the buttpad by squeezing the tabs firmly and applying pressure. To reinstall align upper groove into appropriate place on back of stock and push up while pressing the locking tabs back into place.

Water Resistant Storage Removal: To remove the Water Resistant Storage compartments you will need to remove the Stock from the Buffer Tube. Rotate the tabs inward and pull.